

Refrigerator

General handling and tips

Refrigerator

Only the freezer compartment requires occasional defrosting depending on ice build-up – the refrigerator compartment defrosts automatically.

The upper part of the freezer compartment contains a silver metal panel (Stop Frost) that collects moisture in the form of ice. This panel can be removed to enable defrosting and cleaning outside of the freezer.

Place food products in your refrigerator according to the temperature zone.

The “warmest” zone is in the top refrigerator compartment and the “coldest” is on the bottom glass shelf. The “Profresh” function helps keep products fresher for longer.

The cooling temperature inside the refrigerator is maintained at a constant level regardless of the ambient room temperature. There is no need to lower the temperature in summer to keep it at a constant level.

Use mild cleaning agents to clean the inside of the refrigerator.

The refrigerator has an antibacterial filter on the inside which reduces the germ load. It should be replaced from time to time. You can order filters here: www.bauknecht.ch

