


# Dishwasher

## General handling and tips

---

Modern dishwashers are very efficient and energy-optimised. This can lead to longer programme cycles. In addition, not every programme has a drying cycle.

See operating instructions

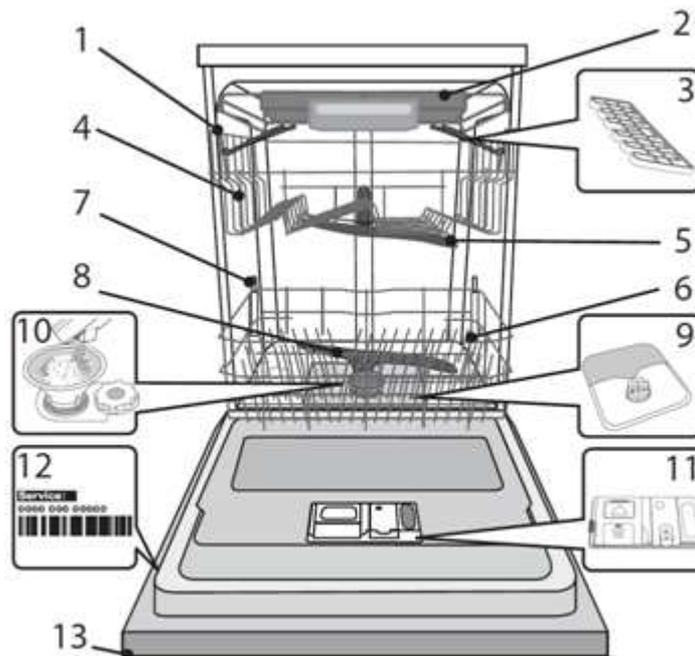

1. Top basket
2. Cutlery drawer
3. Foldable flaps
4. Top basket height adjuster
5. Top spray arm
6. Filter unit
7. Room zone
8. Bottom
9. Filter unit
10. Salt container
11. Detergent and rinsing aid
12. Type plate
13. Operating panel

## Important tips for use

Check the coarse and fine filters (No. 9) after each use.

Keep the filter unit straight when lifting it upwards to prevent foreign objects (broken glass, etc.) from falling into the waste water system.

## Loading the baskets

Make sure that water from the bottom spray arm is sprayed correctly into the dishwasher (bowls, pans and dishes placed at an angle can impede the cleaning process).

→ **Only coarse matter should be cleaned from dishes before placing them in the dishwasher**

Thorough pre-cleaning can irritate the optical sensor due to an incorrect ratio of dirt to soapy water.

If your dishwasher has a dishwasher tab option, use the buttons on the appliance to select the correct cleaning agent (tabs or powder). See operating instructions.

Open the dishwasher door slightly one hour after the end of the cleaning cycle for optimum drying results.

If you want to run the dishwasher overnight, you can use the timer delay button to programme the dishwasher to finish its cycle early in the morning so that the door can be opened slightly after completion.

Glassware should only be cleaned using the glass programme whenever possible (the higher temperatures of other programmes can leave marks such as white fog and scratches on glassware after just one cycle).

**Make sure the dishes (wood, silver and especially glassware and porcelain) are dishwasher-safe!**

## Using detergents

Make sure that the salt container always has sufficient regenerating salt. Rinse off any residue salt or start a pre-wash programme after filling.

The powder compartment must be **dry** before powder is added.

Tabs can be placed directly into the compartment.

Always keep the rinsing agent compartment topped up.

Recommendation: use a dishwasher cleaner/degreaser every 3 months to keep the dishwasher clean on the inside. Products are available from [www.bauknecht.ch](http://www.bauknecht.ch)

You can call the detergent manufacturer's hotline in the event of a problem with cleaning. (The manufacturer's address and telephone numbers are printed on the detergent packaging).

For further information on how to use your dishwasher and his various programmes, please refer to the enclosed operating instructions.

Sales  
Customer Service  
Replacement Parts

Tel.	0848 801 002	Fax	0848 801 017
Tel.	0848 801 001	Fax	0848 801 003
Tel.	0848 801 005	Fax	0848 801 004

CHE - 105.929.116 MWST

Credit Suisse, 8070 Zurich CH62 0483 5143 6281 8100 0