


Washing machine

General handling and tips

Modern washing machines are very efficient and energy-optimised. This can lead to longer programme cycles.

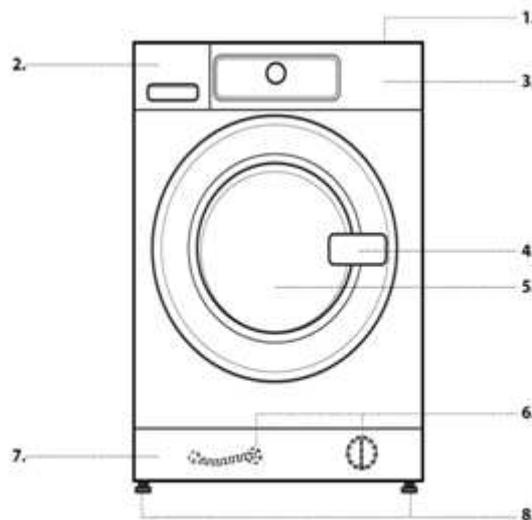

- 1: Work surface
- 2: Detergent compartment
- 3: Operating panel
- 4: Door handle
- 5: Door
- 6: Water filter/drainage hose for emergencies (where fitted) – behind the plinth
- 7: Plinth (removable)
- 8: Adjustable feet (4)


Control panel

Sales
Customer Service
Replacement Parts

Tel.	0848 801 002	Fax	0848 801 017
Tel.	0848 801 001	Fax	0848 801 003
Tel.	0848 801 005	Fax	0848 801 004

CHE - 105.929.116 MWST

Credit Suisse, 8070 Zurich CH62 0483 5143 6281 8100 0

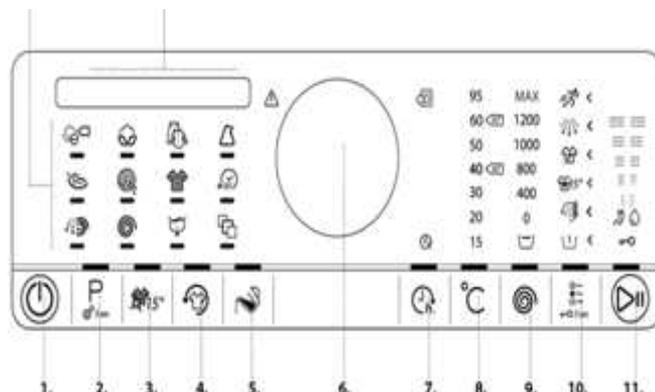

Control Panel

1. On/Off button (Press and hold to reset/drain water)
2. Programme button
3. 15° Green&Clean button
4. FreshFinish button
5. Dosing display button
6. Knob (turn to select / push to confirm)
7. Finished in button
8. Temperature button
9. "Spin" button
10. Button for additional functions (press and hold button lock)
11. Start/Pause button
12. Display
13. Programme range

Important tips for use

The operating panel on the front of the appliance is equipped with sensor buttons that should be touched lightly, not pushed.

Check the coarse filter (No. 6) once a week. Drain off residual water via the small grey hose (No. 6) before unscrewing and removing the filter cartridge.

The detergent tray (No. 2) can be removed and cleaned simple in the sink.
The detergent drawer (No. 2) can be removed and cleaned simple in the sink.

The door locks when the programme starts and cannot be opened until it finishes (until the end).

If you need to cancel a programme, touch the On button for approx. 5 seconds to start the cancellation process.

A small black loop secured by a cross-head screw is located near the coarse filter (right) if the door needs to be opened in an emergency. It is intended for emergencies only and therefore needs to be released and pulled downwards slightly.

➔ Caution: Only use when the machine is empty !

If the display does not light up and you cannot select a programme, it is possible that a programme was terminated incorrectly or different programmes were selected simultaneously on the operating panel.

To reset the electronics, switch off the power supply to the machine for 5 minutes (switch off at the mains outlet or pull the mains plug or trip the fuse). You can then start the washing machine normally again.

Detergent usage and programme selection

Please always use the correct programme and amount of detergent for the type of washing.

Washing at low temperatures using liquid detergents can lead to an accumulation of sludge inside the washing machine in the long term. The machine will become discoloured (grey) will become mildew and develop a strong odour.

To prevent odour formation, please leave the door open slightly and pull out the detergent drawer slightly when the machine is not in use to allow the machine to dry on the inside.

Running a hot cycle (95°C) removes grease deposits and sterilises the washing machine.

If you frequently use low-temperature programmes, it is recommendable to run an empty cycle with a washing machine cleaning agent at 60°C every 3 months.

We recommend our WPro Tabs or a washing machine cleaner/degreaser, both of which are available from www.bauknecht.ch

For further information on how to use your washing machine and its various programmes, please refer to the enclosed operating instructions.